


VERSATOOL PROBLEMS AND SOLUTIONS

P. Tool is leaking from the tip.

S. Remove the soil pipe and in the base of the valve tighten the seat gasket holder with a 5/32" hex wrench.

If tool continues to leak, remove the seat gasket holder with a 5/32" hex wrench and replace the (white) seat gasket.


If tool continues to leak, replace O-rings on the valve rod. Disassemble the trigger, then remove the seat gasket holder; push the Valve rod out from above.

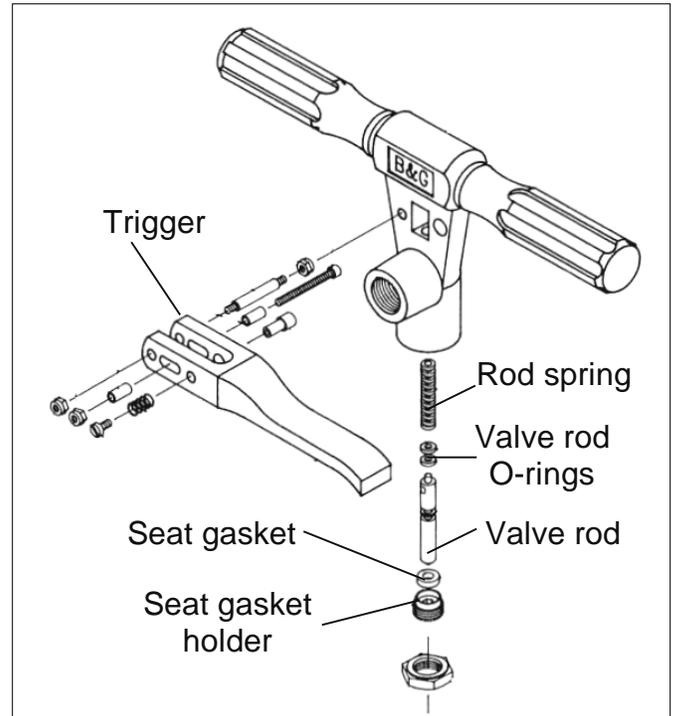

P. Leaking occurs around the soil pipe connection to the valve.

S. Remove the soil pipe and in the base of the valve tighten the seat gasket holder with a 5/32" hex wrench.

If leak continues, remove the Seat gasket holder (5/32" hex wrench) and replace the white seat gasket.

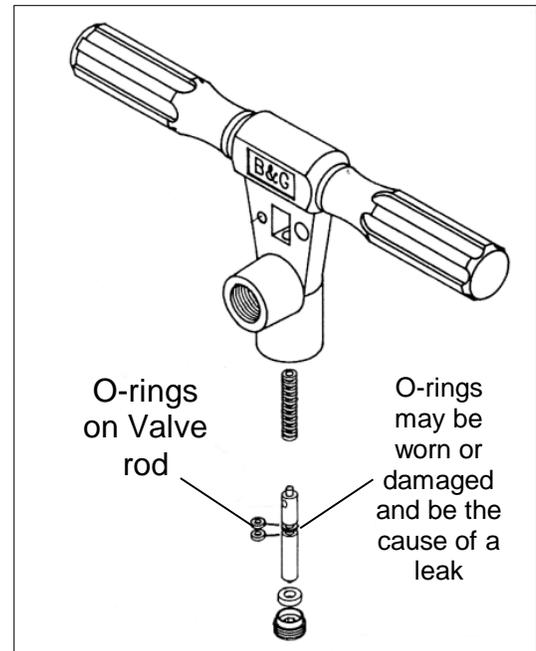

P. Leaking occurs around the rod spring at the center of the valve handle.

S. Replace O-rings on the Valve rod. Disassemble the trigger, then remove the Seat gasket holder; push the valve rod out from above.